


# BASIC REAR MOUNTING INSTRUCTIONS

1. Mark and drill the location of the roof mounting holes (1/2" diameter). Apply a generous amount of silicone to holes and roof mount brace.
2. Secure the carriage bolts with washer and nut provided.

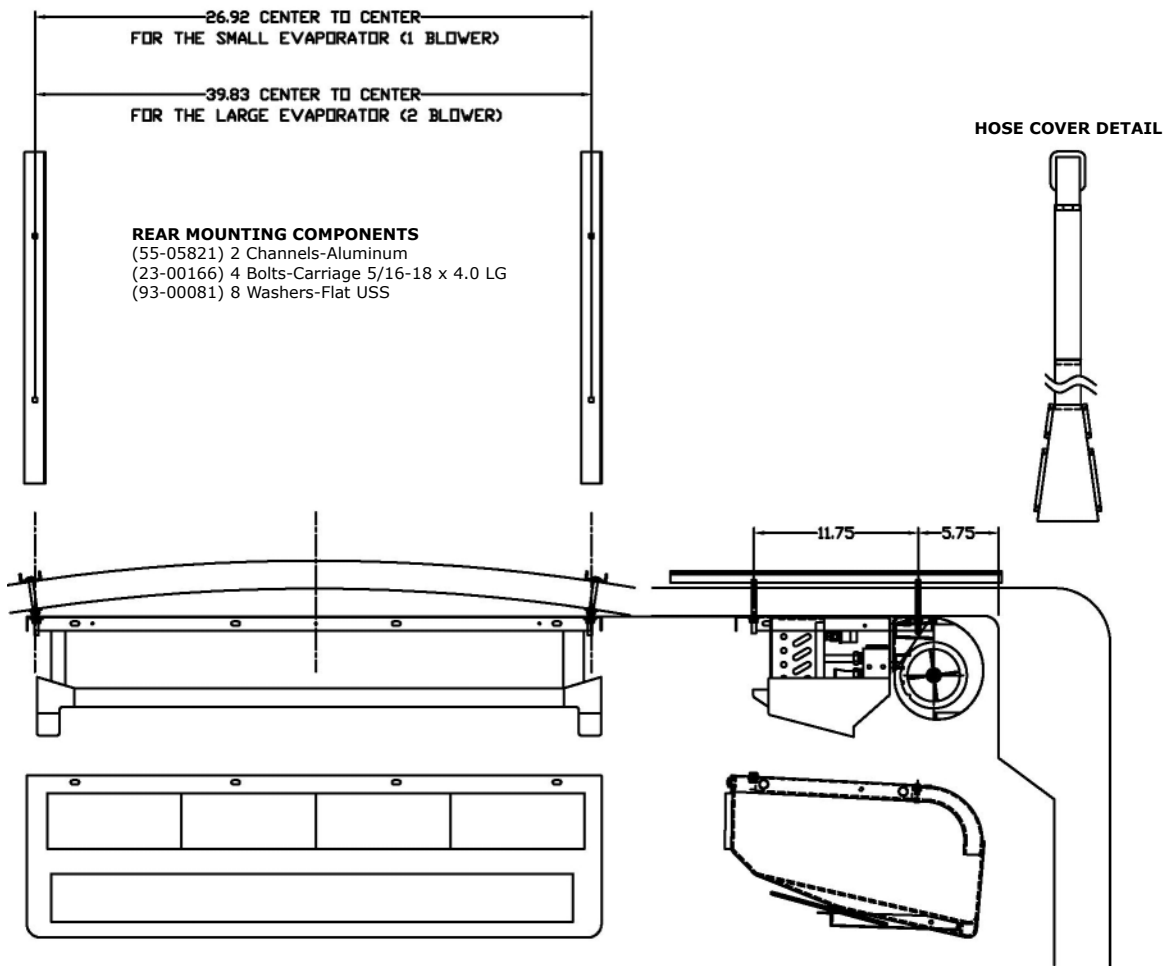

3. Attach the evaporator assembly to the front and rear mounting holes with hardware provided.
4. Mark and drill a 3" hole in the floor, secure the 3" hose protector.
5. Route the refrigerant hoses up through the floor and secure to the evaporator coil with fittings and o-rings.
6. Secure the wire harness to the evaporator and route it down through the floor.
7. Install and secure roof collar (trim to fit).
8. Secure the trim to the top of the roof collar.
9. Obtain the drain hose, cut and secure the hose to the drain pan (see detail).
10. Position and secure the hose cover base to the side or rear wall (as required.)
11. Route the drain hose down through the floor with the refrigerant hose. Secure the hose cover base.  
-CAUTION- DO NOT cut or puncture refrigerant hose or wire harness.
12. Secure cover assembly to unit.

**DRAIN HOSE ASSEMBLY DETAIL**  
 (31-00589) Drain Hose 1/2" ID  
 (Reinforced)  
 (01-04113) Drain Tee 1/2"  
 (21-00828) Gear Clamp 6-8  
 (31-00560) Kazoo 4"

